

POWER MOUNT TO HINGED ADAPTER INSTALLATION GUIDE

PART NUMBERS PM-H7, PM-H8

Your **SEAVIEW** Hinge Adapter kit will consist of the Hinge Adapter, **Fig.1** and (4) **5/16-18** stainless countersink fasteners (4) **5/16-18** stainless Nylock nuts and (4) nylon shoulder washers, see **Fig.2**.

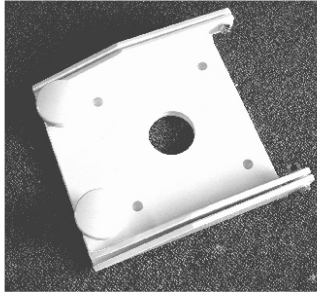


Fig.1



Fig.2

Opening the Hinge Adapter.

Remove the hinge knobs and open the hinge adapter to allow for access to the underside of the top plate. See **Fig.3** and **Fig.4**.



Fig.3

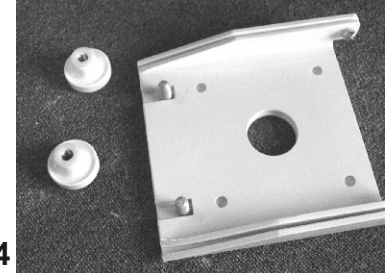


Fig.4

Installing the shoulder washers.

Insert the nylon shoulder washers into the mounting holes of the Power Mount base plate. Be sure the washer flange rests on the top face of the base plate. See **Fig.5** and **Fig.6**.

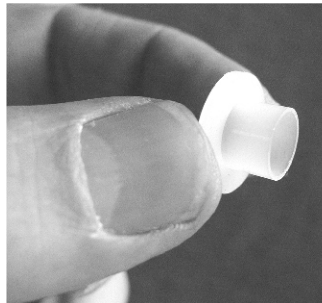


Fig.5



Fig.6

Bolting the Power Mount to the Hinge Adapter.



Fig.7

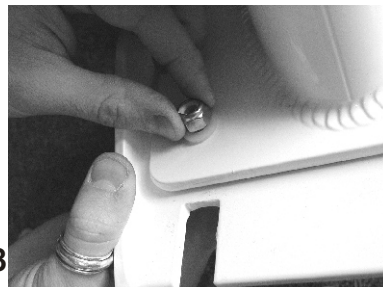


Fig.8

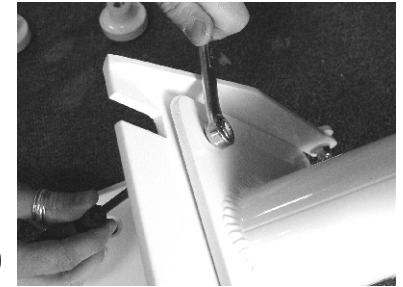


Fig.9

From the underside of the Hinge Adapter top plate, insert the **5/16-18** countersink fastener, see **Fig.7**. While holding the fastener in place lower the Power Mount onto the hinge adapter plate allowing the fastener to push through the nylon shoulder washer. Attach the **5/16-18** Nylock nut to the fastener, **Fig.8**. Repeat these steps to install the remain fasteners. With a flat blade screw driver and a 11mm box end wrench tighten the assembly, see **Fig.9**.

* For correct hinge placement on an arch or cabin top place the hinge pivot point past the arch or cabin top edge to allow for full hinge rotation.



www.pyiinc.com



12532 Beverly Park Road
Lynnwood, WA 98037
Office (425) 355-3669
Fax (425) 355-3661
Email: info@pyiinc.com